 


INSTRUCTION MANUAL

Yuego WATERING DEVICE

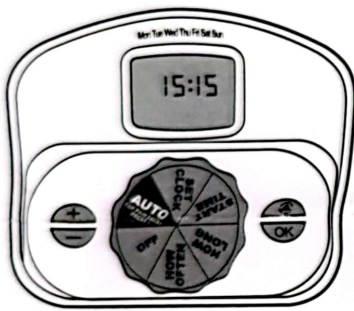

Model: BX-6609

G.W: 520g

Materials: ABS,PVC


SPECIFICATIONS

Input Voltage	3V
Input Current	50mA
Output Voltage	12V
Output Current	2A
Flow rate	850ML/min
Water pipe size	4/7

HOW TO ASSEMBLE


STEP 1

 Cut the pipe into the length you need.

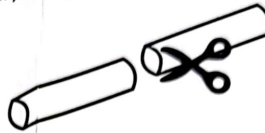


STEP 2

 Connect the pipes to the water inlet and outlet.

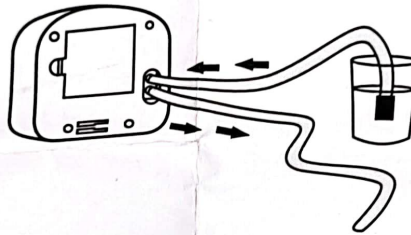


STEP 3

 Equip the pipes with T-joints for two-way watering.

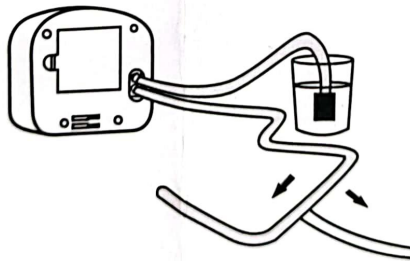

STEP 4

 Insert the dripper into the pipe.

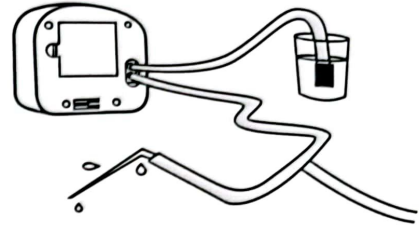


STEP 5

Press the buttons to activate and test.




STEP 6

 Start automatic dripping for potted plants.

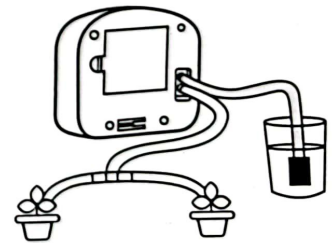

CONTROL BUTTONS

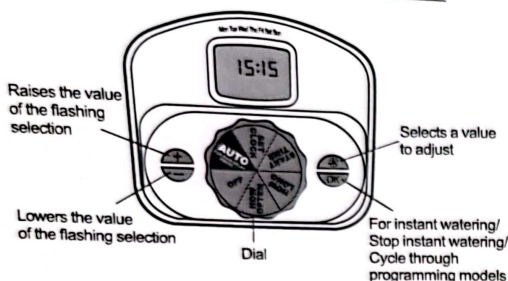 

INSTALLING THE BATTERY

4 × 1.5V ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 4 × 1.5V Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.



MAINTENANCE

 
Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

HOW TO INSTALL

Use 4/7 tube connect in the two nozzle, then Put the tube which show "IN" to the bucket. Another tube connect a drip irrigation system.

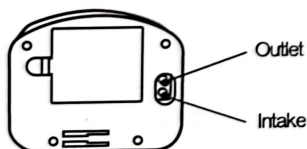


A SETTING – TIME & DAY



Turn turntable to "SET CLOCK", Then set time.

Push to select hours, minutes and current day. Adjust using set increasing or decreasing.

 B SETTING - START TIME

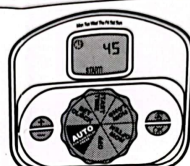


Turn turntable to "START TIME"

Push to select hours then again to set minutes.

Push to adjust minutes and hours.

Push set up to 4 start times.

 C SETTING - HOW LONG

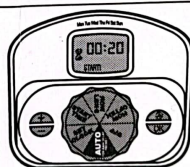


Turn turntable to "HOW LONG"

Adjust using set increasing or decreasing.

Push set up to 4 start times.

 D SETTING - HOW OFTEN

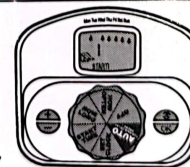

Turn turntable to "HOW OFTEN"

Push until the square flash under Monday.

Push to deactivate Monday or to keep it active and advance to Tuesday. Do this for each day you would like to water.

E MANUAL OPERATION

 


To instantly water push .

Push to stop or it will run for the programmed time (if set).

Default watering time is 2 minutes.

F DELAY WATERING

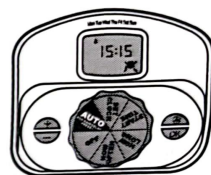

Used to shut - down timer in winter or when it is raining. Set schedules will be retained. You must turn this feature off to resume programmed watering schedules.

Turn turntable to "OFF" then the symbol appears on the display. Turn turntable to "AUTO". symbol will disappear and the previously programmed watering.

E-mail: Yuego1@yeah.net

Manufacturer: Ningbo Boxi Garden Equipment Co., LTD
Address: 33 Jingong Road, Taoyuan Street, Ninghai County, Ningbo City, Zhejiang Province

Made in China