


F013 Pro WATERPROOF WIRELESS SPEAKER

MP3 PLAYER & SPEAKERPHONE

Quick Start Guide & User Manual


KEY FUNCTION


-  1. Hold the power button for 3 seconds to switch speaker on and off.
- 2. Short press to switch multiple color LED light in turn.
 - Breathing light: Gradually change from one color to the others
 - Lock only one color (From Dark Blue, Grey, Red, Green, Yellow, Purple to Light Blue)
 - Beat-driven light show
 - Seven colors change rapidly
 - No light.


On-screen Display

1. Bluetooth mode: Time, U (Volume range: 0-30)
2. FM radio mode: Radio channel, P (Stations), U (Volume range: 0-30)


Connect the antenna for better signal reception.

-  Press and hold to previous song. Short press to turn down the volume.

-  Press and hold to next song. Short press to turn up the volume.

-  1. Press to play or pause the music.
Press to answer or end the phone call.

2. Press and hold to reject the incoming calls.
3. In FM radio mode, long press to automatically search for stations, quick click to lock station, long press "+" "-" to the station you want to play.
4. In Bluetooth mode, press and hold this button for 3 seconds, adjust "+" "-" to set local time, press once to lock the time you have selected.

-  1. Press to switch the mode between wireless and FM radio.
- 2. Press and hold to cut off the current wireless connection.

MAIN FEATURE

- Wireless 5.0
- Waterproof Grade: IPX7
- Multiple Color LED Light
- LED Display
- Portable Lanyard
- Strong Suction Cup
- Hands-free Talk
- Charging by USB
- FM Radio with Signal Enhancement Antenna

SPECIFICATIONS

- Frequency Response: 120Hz-22 KHz
- Operating Distance: Up to 66 ft
- Battery Capacity: 730mAh
- Power Rating: 8W
- Charging Voltage: DC 5V
- Microphone: Built-in
- Charging Time: Approx. 2 Hours
- Playback Time: Up to 8 Hours
- SNR: ≥85+2dB
- Housing Material: ABS+Silicone

WIRELESS PAIRING

Please charge the speaker for 3 hours before using

it for the first time.

1. Make sure the power is off, place the mobile phone or media player device next to it. Press and hold the power button for 3 seconds to pair. If Bluetooth is not connected within 10 minutes, the product will shut down automatically.
2. Activate the wireless feature on the media player device and search for "F013 Pro" from the list for pairing. Enter "0000" if the media device prompts for a password.
3. If the connection fails, please refer to the user manual of media player device for wireless setup. Remove all the excessive unused models from the list of paired devices and start over from step 1 again.

RECHARGING THE DEVICE


The wireless speaker is powered by a built-in rechargeable lithium battery that can be operated by the following steps.

1. Release the DC 5V charging port cover.
2. Connect the USB charging cable to a standard USB charging port such as computer or USB charger from the DC 5V socket on F013 Pro.

PACKAGE CONTENTS

- F013 Pro Waterproof Speaker
- USB Charging Cable
- Portable Lanyard
- Dedicated Suction Cup
- Special Antenna
- User Manual
- VIP Card

PRODUCT FEATURE

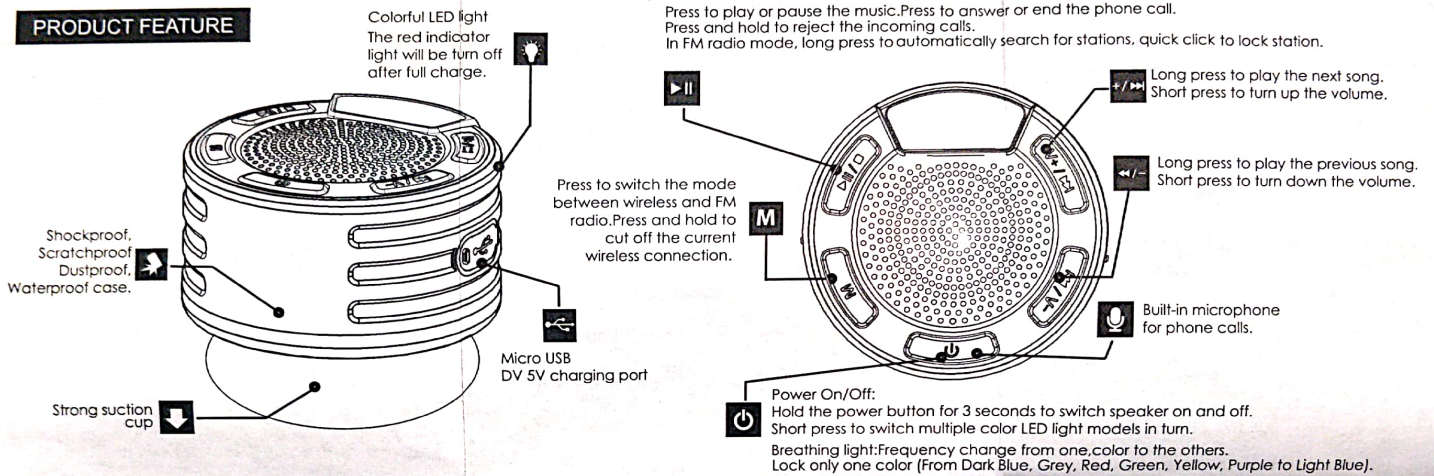

TROUBLE SHOOTING

Symptoms	Causes	Solutions
F013 Pro Can't be powered on	The battery is too low	Recharge the speaker 🔋
Can't to pair with the speaker	F013 Pro already paired or not in pairing mode	Refer to "Wireless Pairing Section" on the previous page
Volume too low	Low battery or the volume on F013 Pro and media player are not set to maximum	Increase the volume of F013 Pro and media player
FM Radio Signals	1. To receive optional FM radio signal, relocate F013 Pro to open environment. Remove it from a closed loop area or other electronic devices to reduce interference. 2. If applicable, inserting the antenna may enhance signal.	

SAFTY INSTRUCTIONS

1. Please make sure the plug cover is tight before drop into the water.

2. Keep the product away from extreme weather to protect the unit against electric shock, explosion or body injury.

- Do not use the product in an overheated place, such as a stove or an open flame.
- Keep the product out of the reach of children. Do not turn the volume too high to avoid hearing damage.
- Clean the product with soft cloth and do not use harsh corrosive chemicals. Always unplug from the power source before cleaning.
- Do not puncture or disassemble the exterior surface of the product in any way.
- Do not insert any metal objects into the device to avoid damaging the product.

CE FC RoHS MADE IN CHINA