 


Portable Folding Fan

Instruction manual

10000mAh

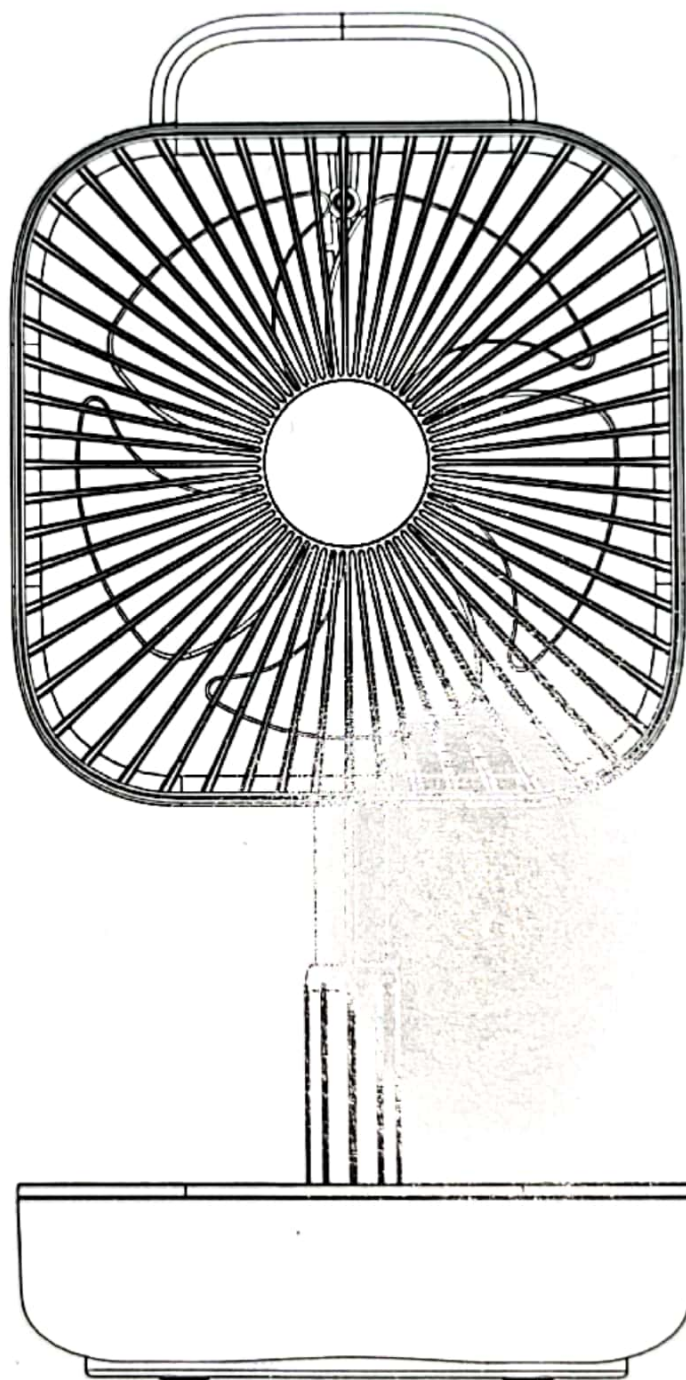


- Thanks for choosing our folding fan, please read the Instruction Manual carefully before use.
- Please keep the warranty card carefully for better after-sales service.


Product Specification:

Product name: Portable Folding Fan	Working time: Normal mode 9-30 hours
Product model: LF01	Oscillating mode 7-15 hours
Main material: Aluminum Alloy&ABS plastic	Charging time: 8 hours
Battery type: Polymer Battery,3.7V	Discharging power: Normal mode:1-5W
Battery capacity: 10000mAh	Oscillating mode:2.5-6W
Product size: 242*208*107mm(folded)	Discharging current: 2A
242*208*1033mm(extended)	Charging voltage: DC 5V

 
Drawing sample:

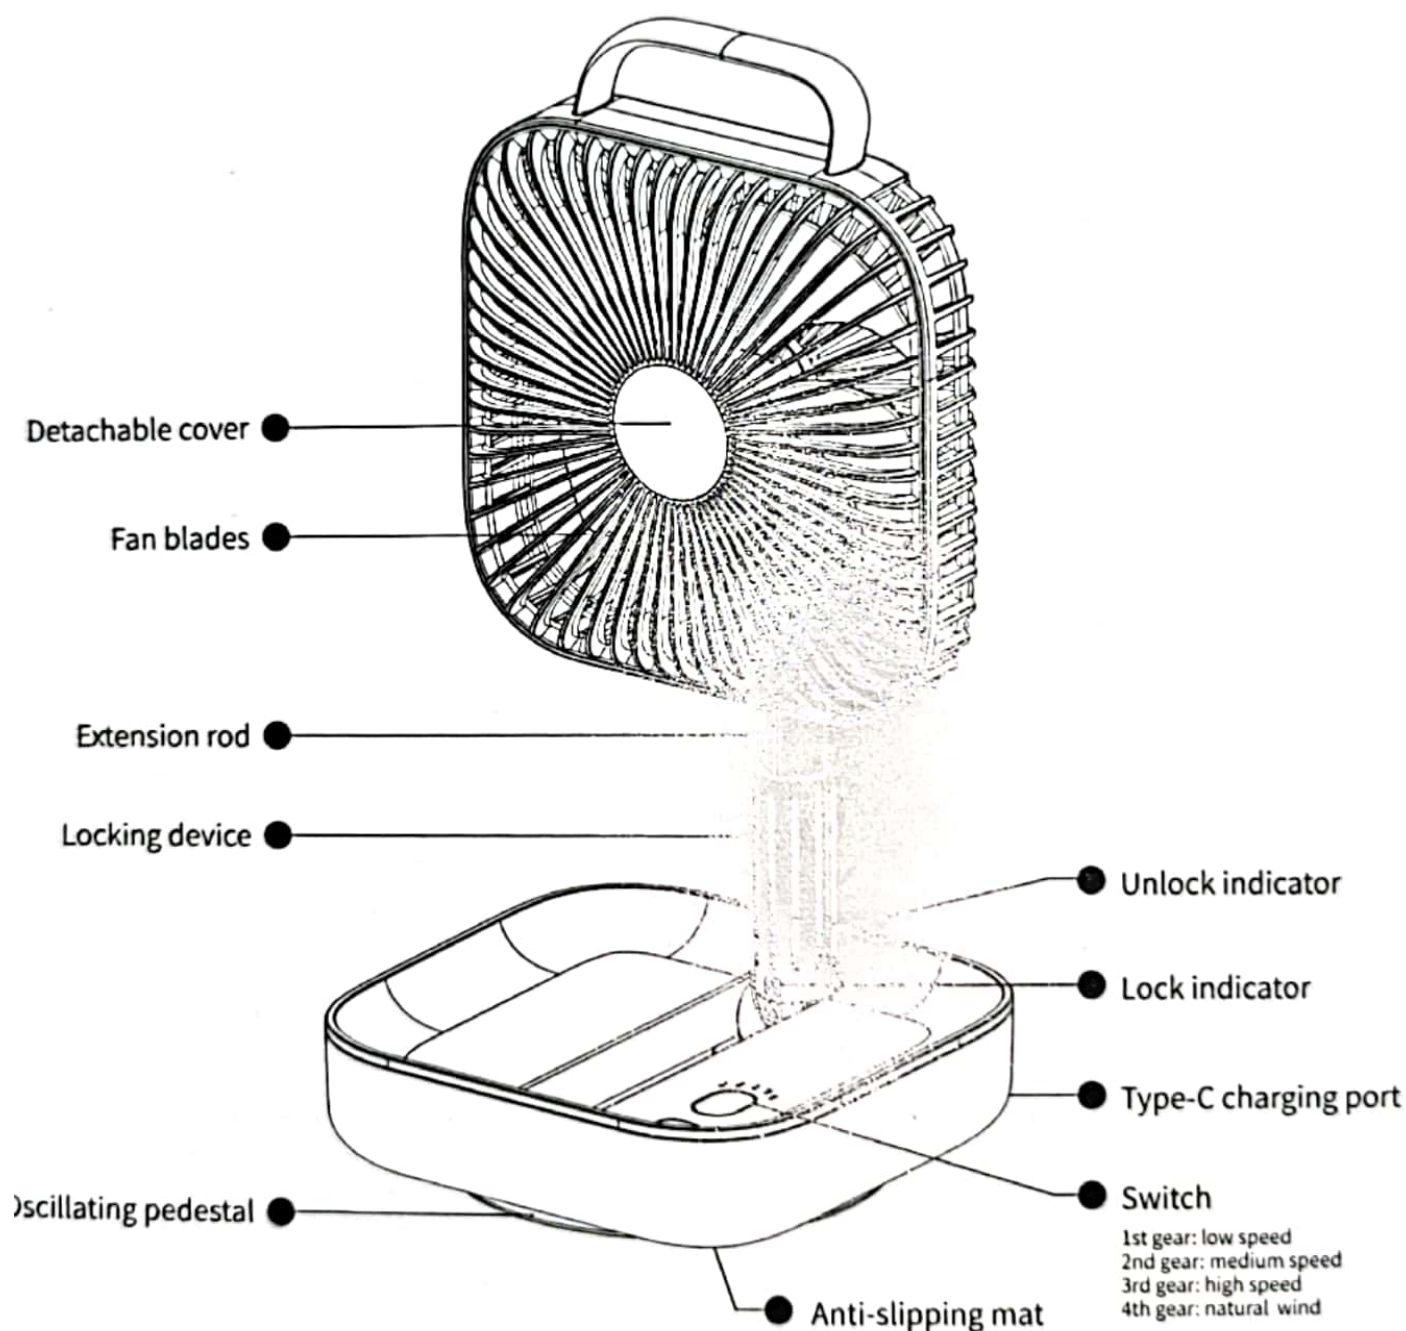


Operations:

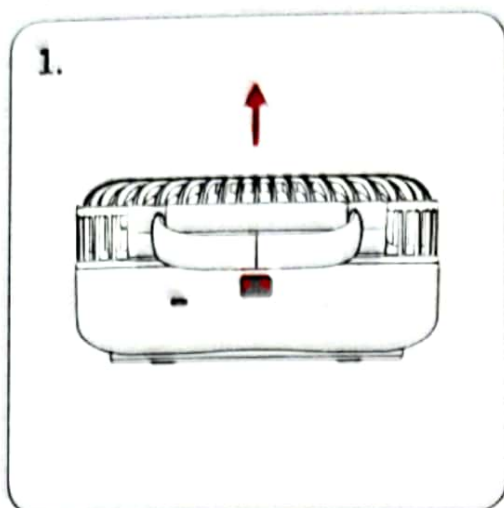 

 When it is folded, pull upwards from the position of "OPEN".

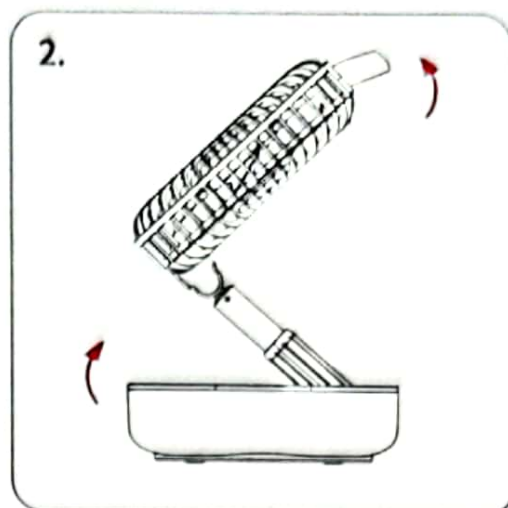


 Unfold fan following the arrow direction.

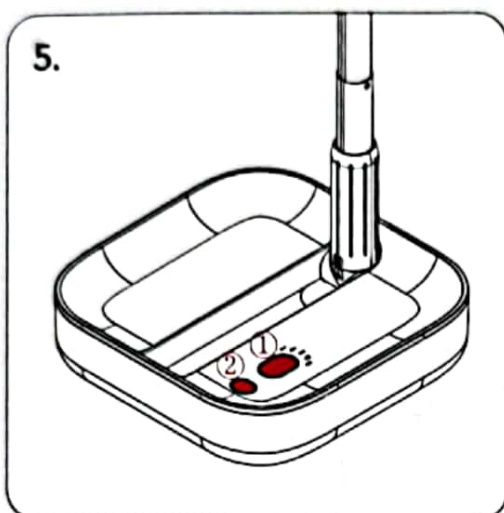


Click switch 1 to turn on the fan. Grade 1,2,3 for speed adjustment, grade 4 for natural wind, and battery power will be displayed after 3 seconds.

 
Click switch 2 to turn on/off oscillate function

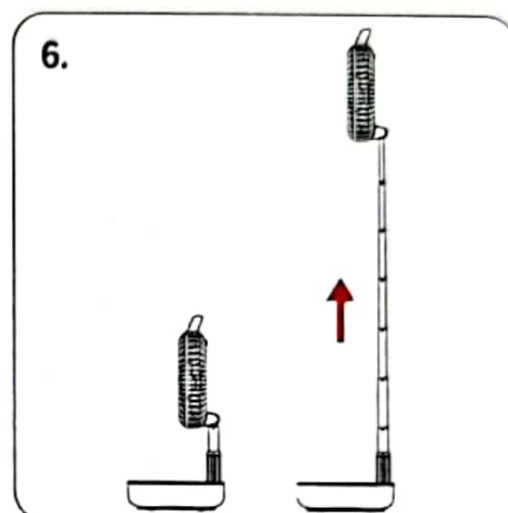

 It provides adjustable height to meet variable need. Please pull the rod up and down gently while adjusting to your preferred height.

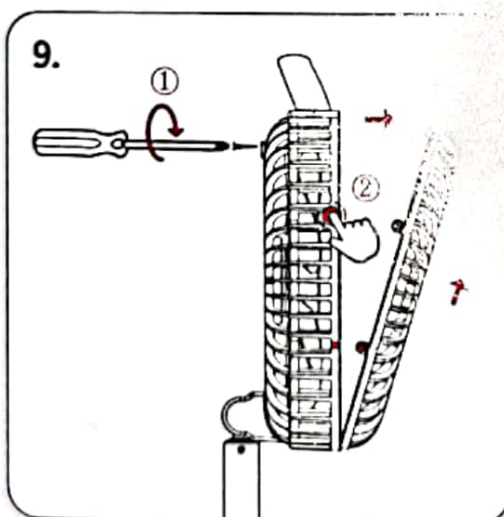

 - ① Remove two screws on the top of the fan.
- ② Press side release clips to release the fan cover.

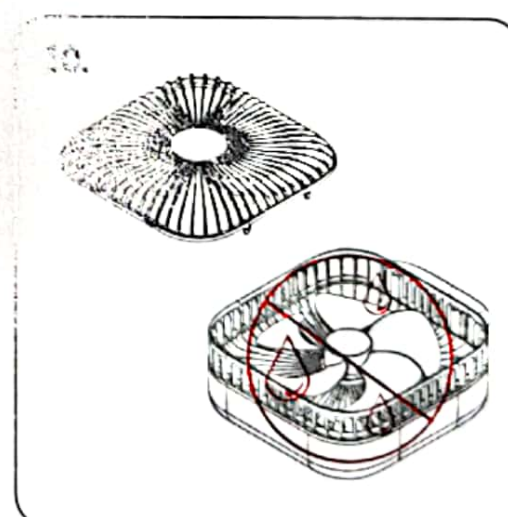


Disassemble the detachable cover to clean the dust. Use dry cloth to wipe the fan body, forbidden to wash with water.




• Pl
• De
• De
• an
• De
• Th
• It
• De
• De
• De
• W

 
Pr

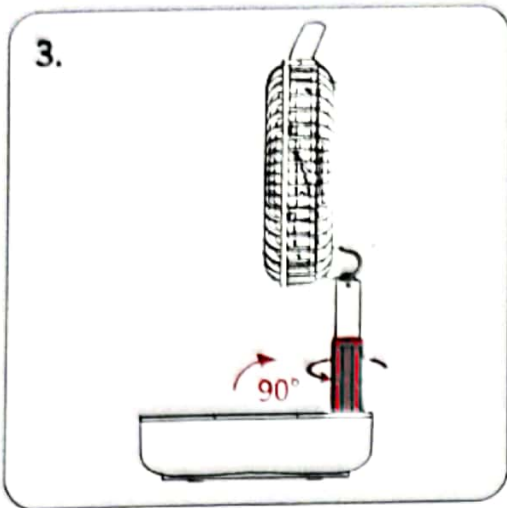

 
Turn the angle to 90° vertical, and then anticlockwise lock the handle device to fix the angle after unfolding the fan.

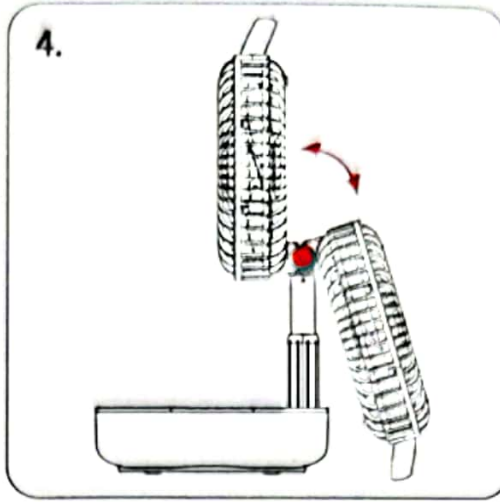

 
180° up and down adjustment is available.

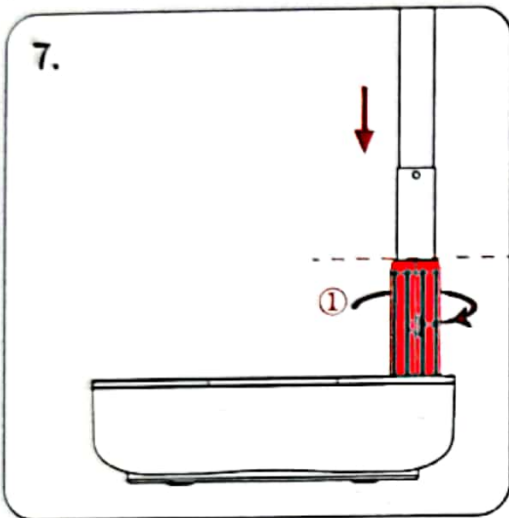

 
Folding ①: Please turn the handle device clockwise to unlock.

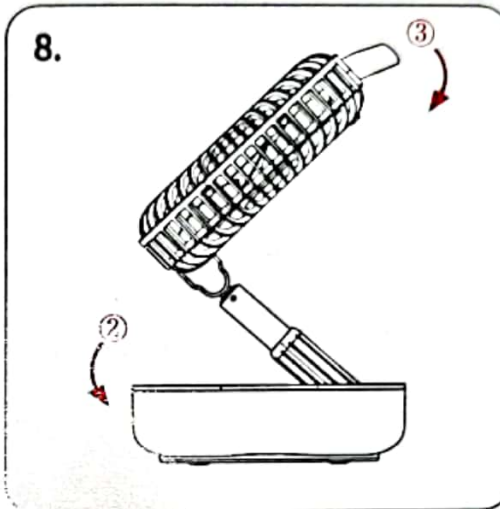

 When the handle device is released, the fan head will be pushed down to the original position. Please make sure the fan head to be flush with the fan base to fold.

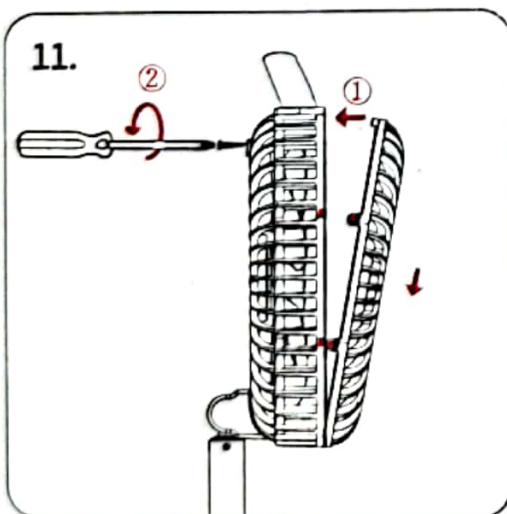

 Align the clip position and tighten the screws to mount it back after the fan cover was dried.

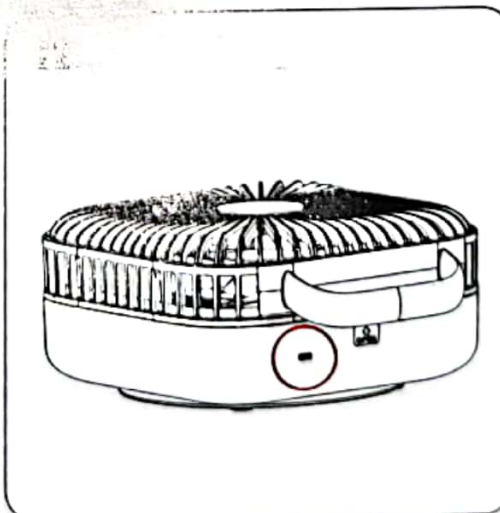

Type-C charging port. Use DC 5V 2A charger.

A

On
Pr
Th
(a)
(b)
(c)
(d)
(e)
N
M

R

Safety Caution:

- Please confirm the appropriate place to use. Act contrary to public order is prohibited.
- Do not place this product on high and uneven tabletops or floors, for avoiding any falling damage.
- Do not use the power supply beyond the product load which might cause the product heating and the circuit board burning out
- Do not disassemble or modify this product by yourself.
- This product is prone to heat generation of electrical motor due to long time usage.
It is recommended to use no more than 4 hours.
- Do not hit or throw this product, or it would be prone to internal malfunction.
- Do not place the product in a low-temperature, humid place.
- Do not throw the product into fire. Please keep it away from fire.
- Warning: This product is not suitable for children no more than 3 years old to use individually.

Product Warranty Card:

Product Model number:

Purchasing Date:

Client Name:

Warranty content:

Contact Address:

Order Number:

Contact:

AFTER-SALES SERVICE

Our products are covered under warranty for maintenance of the machine parts materials and function. Problems and failures verified upon further identification will be repaired free of charge.

This warranty does not apply:

- (a) to a product that is out of warranty;
- (b) to damage caused by operating the product outside the permitted or intended uses described by us;
- (c) to a product that has been disassembled, repaired or modified without the authorization of us;
- (d) if warranty card and proof of purchase cannot be presented;
- (e) to damage caused by earthquake, fire or other external causes, natural disasters, etc.

Note: The warranty does not include product transport costs or provide on-site maintenance services.

 
Made in China

RoHS **CE** **FC**  

便携折叠风扇使用说明书

Instruction manual

10000mAh

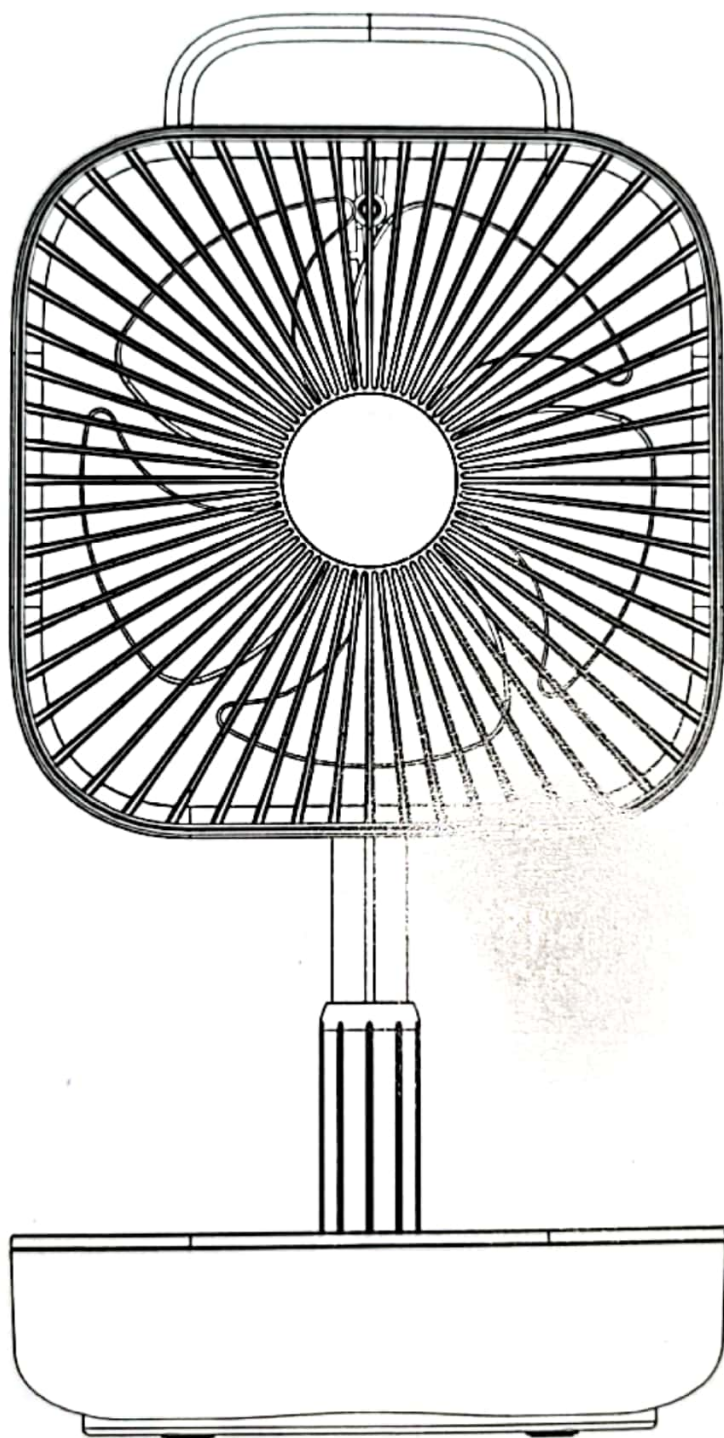

- 欢迎使用便携折叠风扇,使用前请仔细阅读说明书
- 说明书含保修卡,请妥善保管,享受更好服务

产品参数:

产品名称: 便携折叠风扇

产品型号: LF01

主要材质: 铝合金, ABS塑料

电池型号: 聚合物电池

电芯型号: 3.7V 10000mAh

产品尺寸: 242mm*208mm*107mm(折叠)

242mm*208mm*1033mm(拉伸)

工作时间: 正常模式: 9-30H;

摇头模式: 7-15H

充电时间: 8H

 
放电功率: 正常模式: 1-5W;

摇头模式: 2.5-6W


充电电流: 2A

充电电压: DC 5V


产品图例:

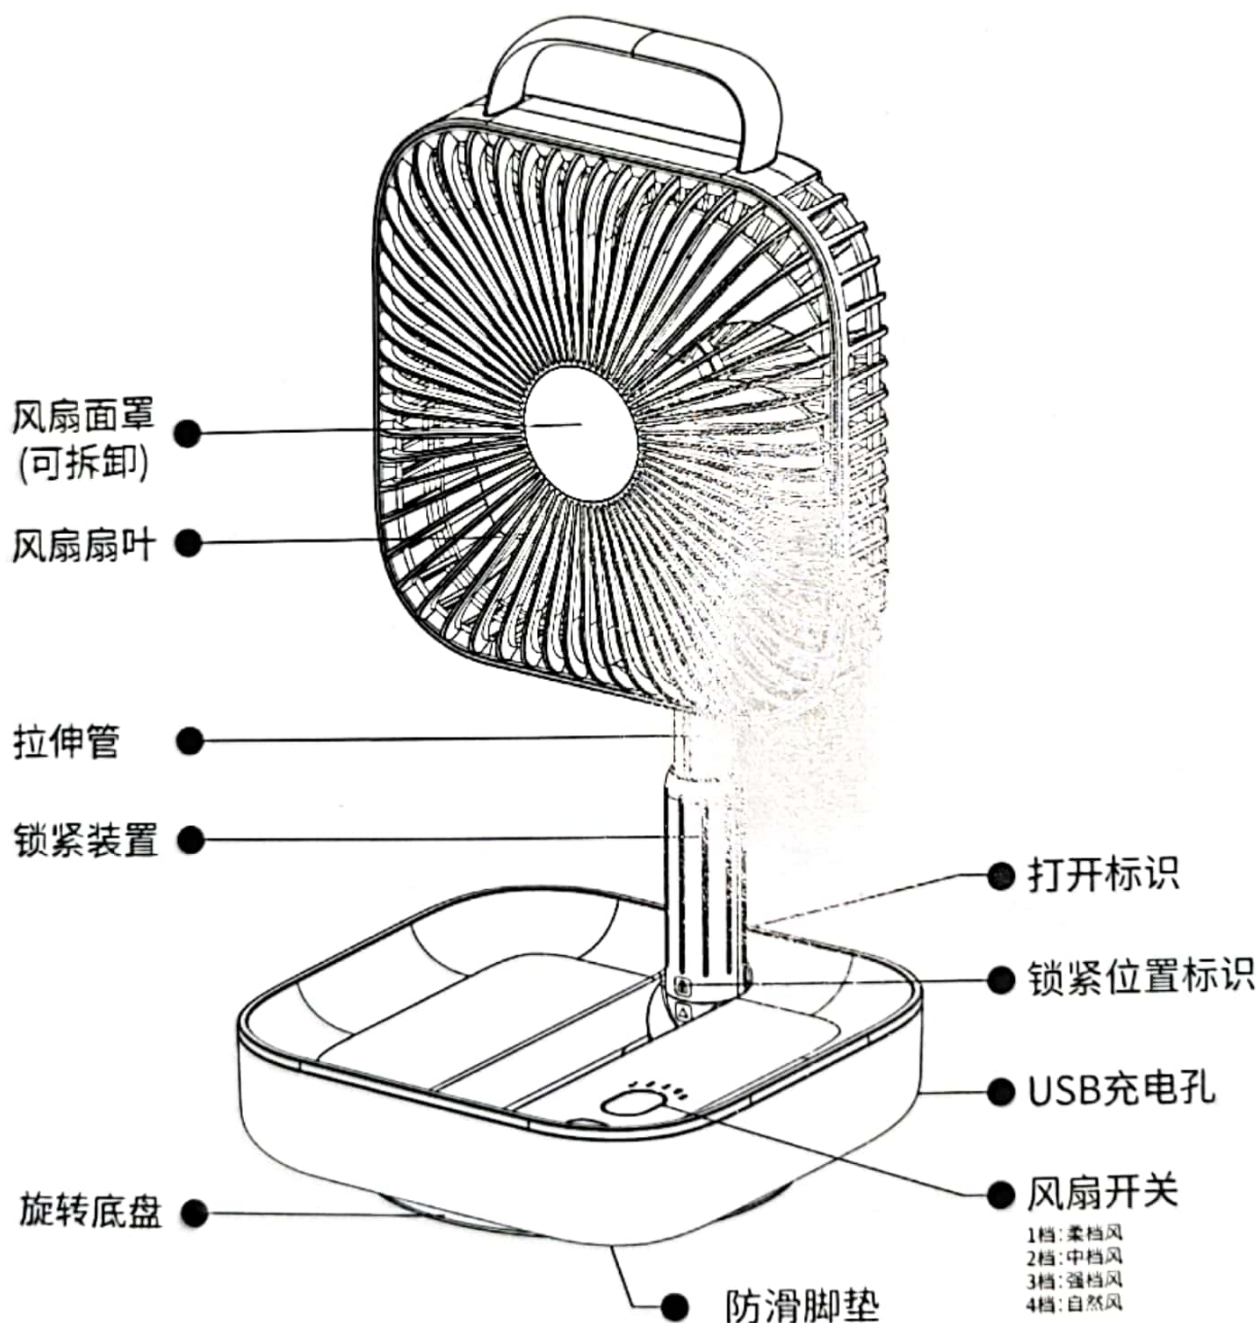


产品操作步骤:

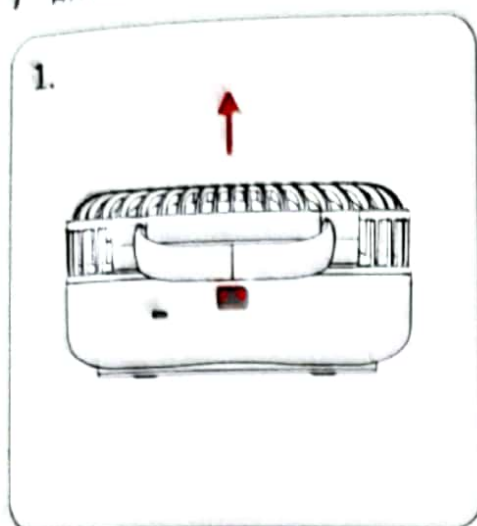 

 
1. 折叠状态下,在“open”处向上拉开,然后打开风扇.

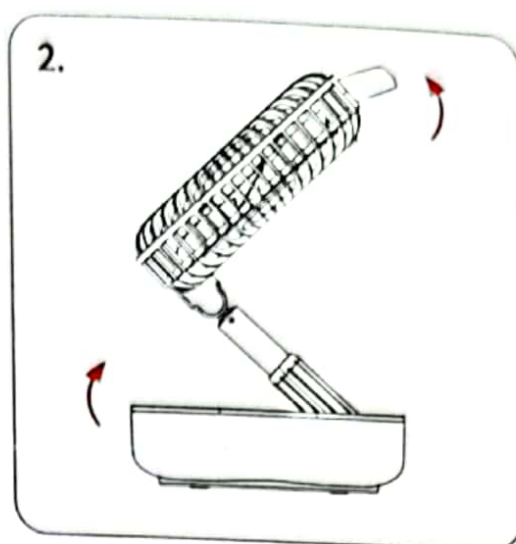

 
2. 按箭头方向打开风扇.

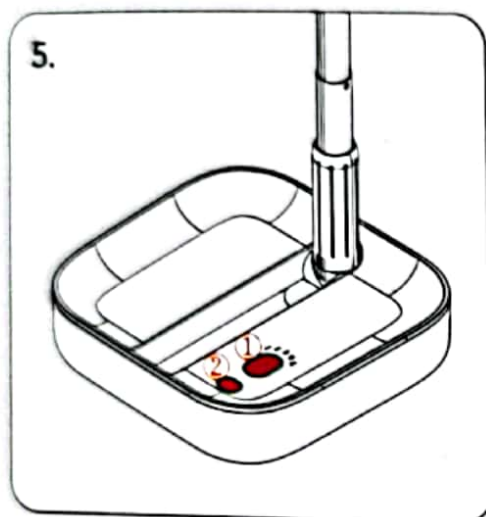

 
5. ①单击开关打开风扇1、2、3档位,4档为自然风,放置3秒后LED转换显示电量.
②单击开关摇头功能.

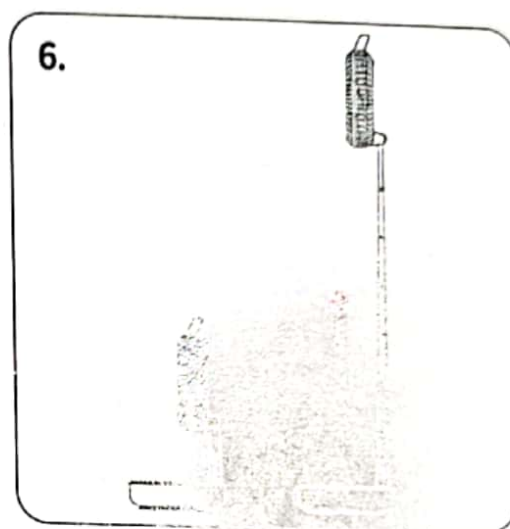

 
6. 风扇可以调节高度,拉杆使用期间请勿收起.

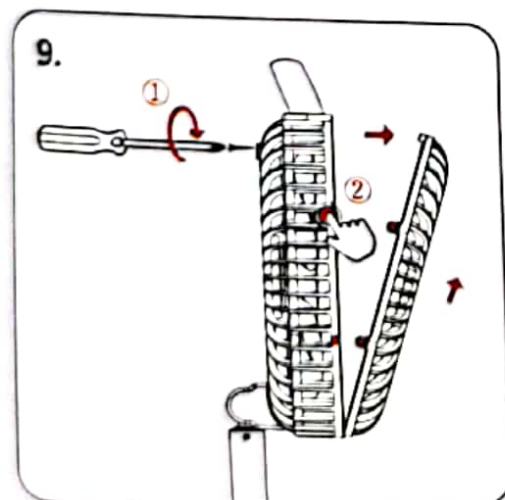

 
9. ①逆时针将螺丝旋转下来.
②用手向内按压风扇面罩两侧四个卡扣,往上倾斜轻拉面罩取出.

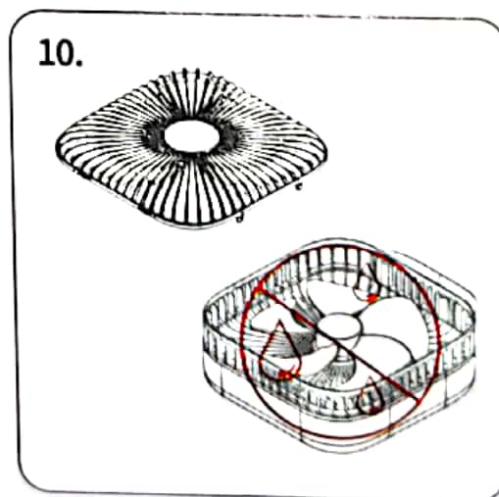

 
10. 面罩可拆卸取出清洗灰尘,机身可用干布擦拭,严禁水洗.

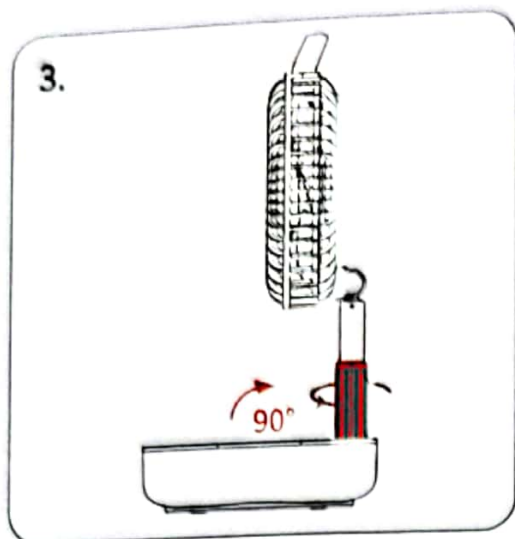

 
打开风扇后, 将角度调至垂直90°, 然后逆时针旋转手柄至120°卡紧固定角度.

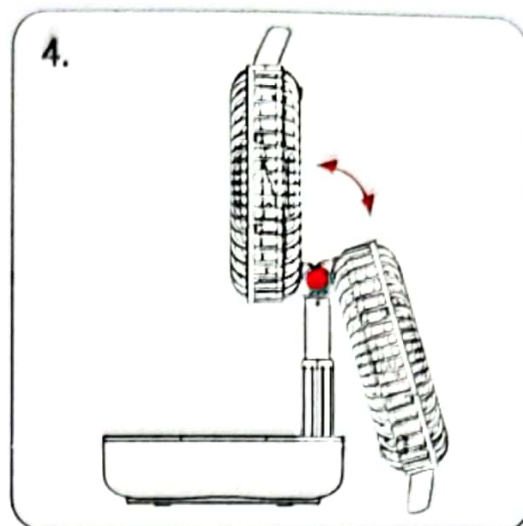


风扇可以上下180°调整风向.

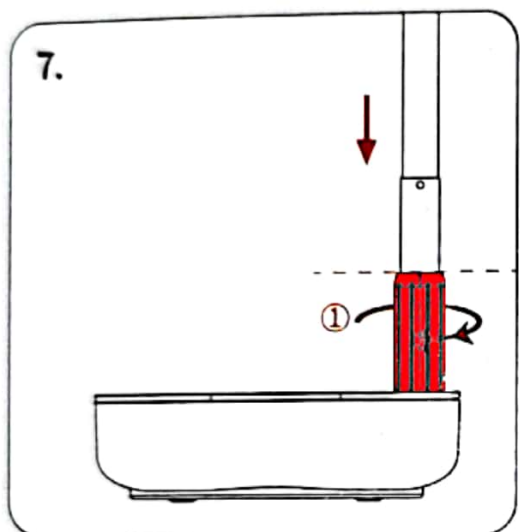 

收纳①, 请将手柄装置顺时针旋转120°松开.

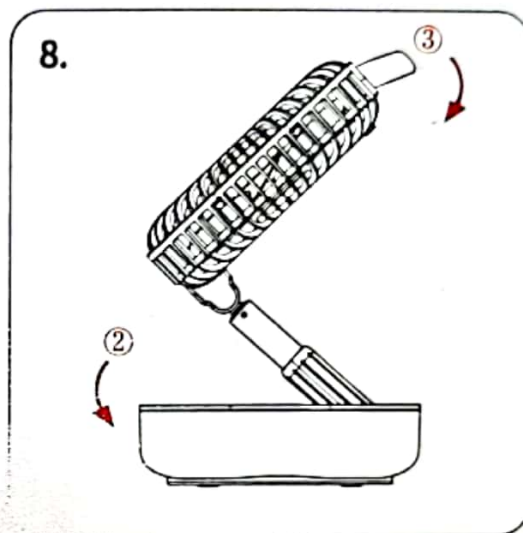 

 ② 松开手柄装置并将收缩管收入收纳槽位.
③ 将风扇头部齐平按入卡扣内, 完成收纳.

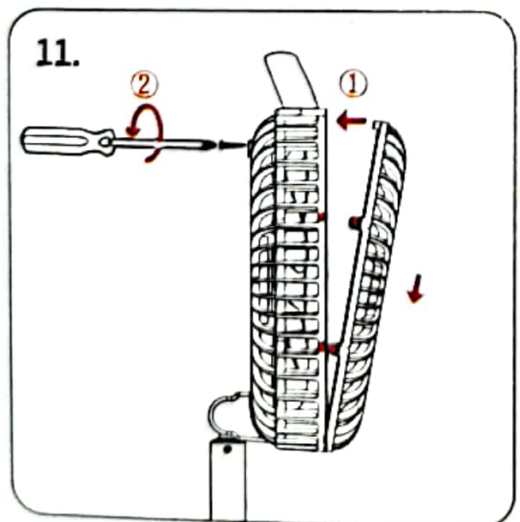

① 待面罩静置干燥后, 将面罩倾斜对准扣位装回.
② 把螺丝顺时针将面罩与进风罩锁紧.



Type-C充电接口
使用常规DC 5V 2A充电器充电

注意事项:

- 使用前请确认使用地域和设施限制的场所,禁止违反公共秩序的行为
- 请勿将产品至于高处及不平坦台面、地面,以防跌落损伤
- 请勿使用超出产品负荷电源,导致产品发热及电路板烧坏
- 请勿自行拆开、改造本产品
- 本产品长时间使用容易导致电机发热,建议使用不超4小时
- 请勿撞击、投掷本产品,容易引起内部故障
- 请勿将产品置入低温、潮湿地方
- 请勿将产品丢入火中、远离火源
- 警告:本产品不适合3岁及以下儿童单独操作使用

产品保修卡:

产品型号:	购买地点:
购买日期:	订单号码:
客户姓名:	联系方式:
保修内容:	
联系地址:	

本产品一年有限保修政策

本产品保证所附带的硬件产品,从原先零售购入的日期一年内在材料和工艺方面无瑕疵,均可受理售后问题。本产品对正常使用磨损不做担保,对于事故或滥用造成的损坏也不做担保。若要获取服务可访问本产品拥有的零售店或本产品授权服务商,即可为你的产品酌情进行修理、更换你享有的保修权益是附加在本地消费者法律所提供的权利以外的。当您根据本保修政策提出索赔时,可能需要提供购买证明的详细信息。

RoHS CE FCC  

Made in China